






1. After powering on RC and UAV, tap the **DC App**


2. Tap **GO FLY**

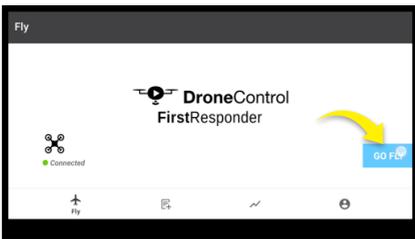



3. Check the preflight checklist and adjust if required then tap the cross in the top right

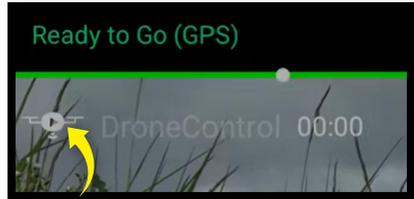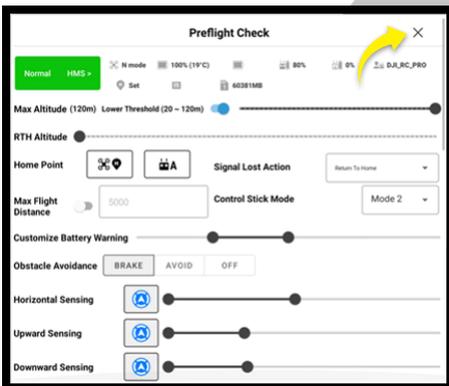

4. Tap the DC Logo **top left**
The start streaming banner will appear

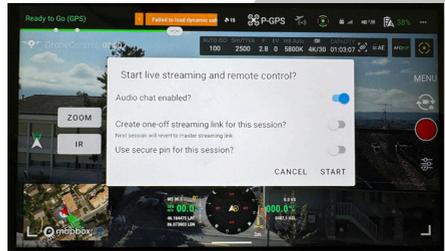


5. Choose how you are **sharing the link**

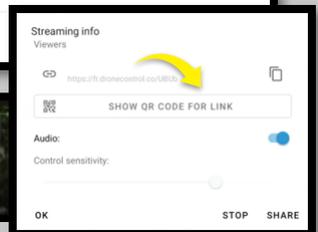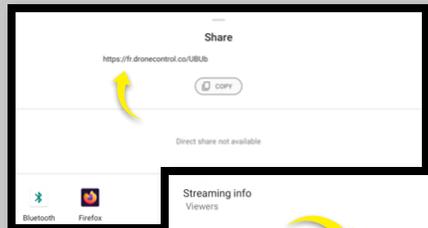

6. Tap on the DC logo to enter the **Streaming menu**. The pilot can choose what control to give to the viewer




7. Change between fitted payload tabs

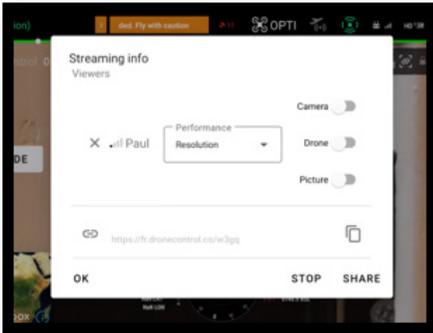

dji RC PRO




dji RC PLUS

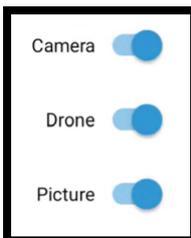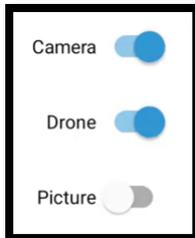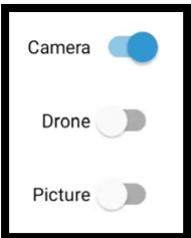


8. To power up the **laser rangefinder**, just tap the laser icon in the DC FR app or in the RVS.

9. For the **drone's position**, just tap the Lat/Lon on the bottom left of the compass

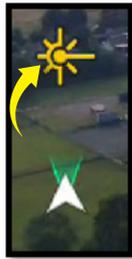


You can then cycle through What3words, and Street Address in either system by pressing here

You can then cycle through What3words, Lat Lon and Street Address in either system here

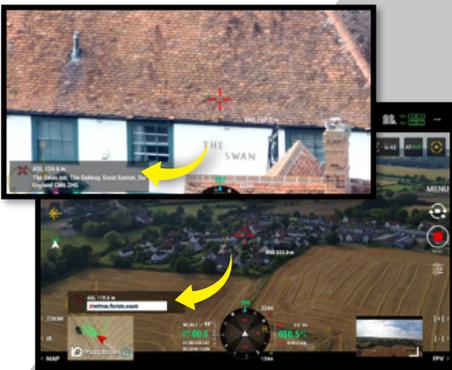

TROUBLE SHOOTING

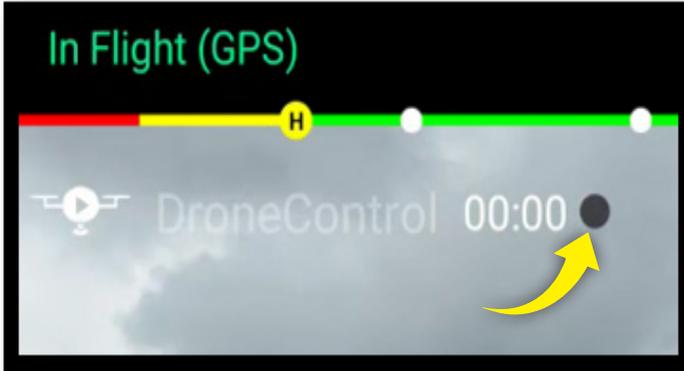

- No video stream, counter staying at 00:00, what colour is the dot next to it? This is a traffic light signalling the quality of connectivity.
- Go to **fast.com via firefox (on RC)** to check true data connectivity (minimum +1.0Mbps download)
- Disconnect and Reconnect RC to data connection via Wifi
- **Restart DCFR App**
- Not able to receive stream in the Remote Viewer Screen (RVS) – Check signal of receiving hardware and make sure connected to source of internet with good signal.
- If problems still persists, please reach out to the following email with details about the problem:
paul.lindup@dronecontrol.co